


Wiring information for ALL601:

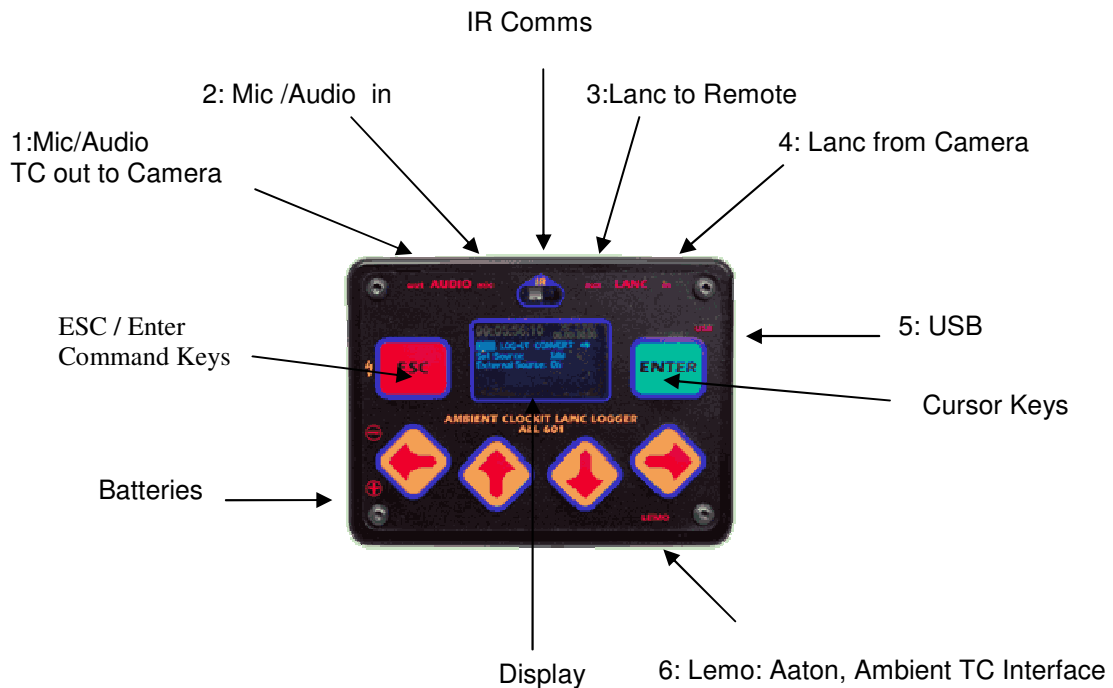

1: Mic / TC out (2.5 mm jack):

- Tip = left (mic looped through)
- Ring = right (mic looped through or time code, variable level 0.0015 V to 1 V)
- Shaft = ground

2: Mic in (3.5 mm jack):

- Tip = left (microphone bias power switchable)
- Ring = right (microphone bias power switchable)
- Shaft = ground

3: LANC to remote (2.5 mm jack):

 
- Tip = LANC signal
- Ring = LANC power
- Shaft = ground

4: LANC from camera / (also LTC-in from Rev. A hardware upwards) (3.5 mm jack):

- Tip = LANC signal (LTC 2 in)
- Ring = LANC power
- Shaft = ground

5: USB (type Mini-B):

- 1 = V Bus
- 2 = D -
- 3 = D +
- 4 = ID
- 5 = GND



Mini-B

6: Lemo 5-pin (JGG/FGG.0B.305.CLAD.ZN):

- 1 = Ground
- 2 = LTC in
- 3 = ASCII in/out
- 4 = Tune reference out 1.92 MHz
- 5 = LTC out

