 


QuickPole Series 5

How to exchange locks using the Lock Upgrade Kit (A16634)

Step 1: Unscrew the old locks completely.

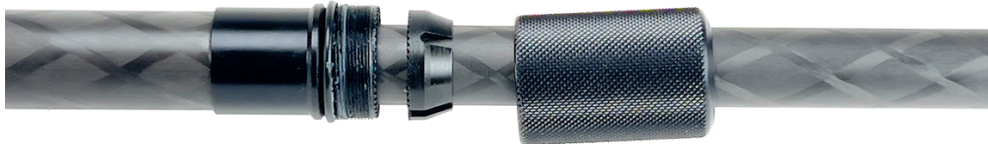


Step 2: Pull the boom segment apart and remove the old clamping ring and nut. Repeat for all segments.



Pro Tip: While you're at it, why not carry out a **complete cleaning including the use of our maintenance kit?** You can find detailed instructions here:
<https://youtu.be/TJGvYHuTMvk>



Step 3: Slide on the new nut, then the new clamping ring

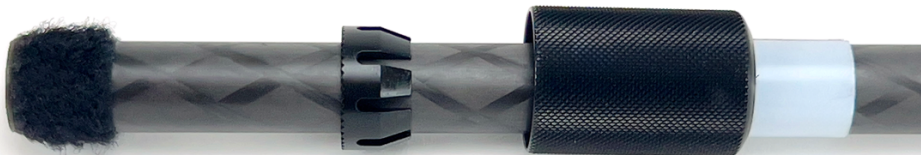

Step 4: Put the segments back together and screw the nuts tight. The clamping ring will automatically fall into the serration.

